

Installation manual PSUP

Mains modules



Autoryzowany dystrybutor Parker:

ARA
PNEUMATIK

53-012 Wrocław tel. 71 364 72 82
ul. Wyścigowa 38 fax 71 364 72 83

www.arapneumatik.pl



PSU-Manual-Set

- ◆ Installations-Handbuch PSUP deutsch
- ◆ Installation Manual PSUP english

192-120147N3 PSUP Manual

May 2011

Windows NT®, Windows 2000™, Windows XP™, Windows Vista, Windows 7 are trademarks of Microsoft Corporation.

nonwarranty clause

We checked the contents of this publication for compliance with the associated hard and software. We can, however, not exclude discrepancies and do therefore not accept any liability for the exact compliance. The information in this publication is regularly checked, necessary corrections will be part of the subsequent publications.

Production site:



Parker Hannifin GmbH
 Electromechanical Automation Europe [EME]
 Robert-Bosch-Strasse 22
 77656 Offenburg (Germany)
 Tel.: + 49 (0781) 509-0
 Fax: + 49 (0781) 509-98176
 Internet: www.parker-eme.com <http://www.parker-eme.com>
 E-mail: sales.automation@parker.com <mailto:sales.automation@parker.com>

Parker Hannifin GmbH - registered office: Bielefeld HRB 35489
 Geschäftsführung: Dr. Gerd Scheffel, Günter Schrank, Christian Stein, Kees Veraart - Aufsichtsratsvorsitzender: Hansgeorg Greuner

Headquarters:

England: Parker Hannifin PLC • Electromechanical Automation • Arena Business Centre
 Holy Rood Close • Poole, Dorset BH17 7FJ UK
 Tel.: +44 (0)1202 606300 • Fax: +44 (0)1202 606301
 E-mail: sales.automation@parker.com <mailto:sales.automation@parker.com> •
 Internet: www.parker-eme.com <http://www.parker-eme.com>

Italy: Parker Hannifin S.p.A • SSD SBC • Electromechanical Automation • Via Gounod, 1
 I-20092 Cinisello Balsamo (MI), Italy
 Tel.: +39 (0)2 66012459 • Fax: +39 (0)2 66012808
 E-mail: sales.automation@parker.com <mailto:sales.sbc@parker.com> •
 Internet: www.parker-eme.com <http://www.parker-eme.com>

USA: Parker Hannifin Corporation • Electromechanical Automation
 5500 Business Park Drive • Rohnert Park, CA 94928
 Phone #: (800) 358-9068 • FAX #: (707) 584-3715
 E-mail: CMR_help@parker.com mailto:emn_support@parker.com • Internet:
www.compumotor.com <http://www.compumotor.com>

Contents

1. Introduction	4
1.1 Device assignment	4
1.2 Scope of delivery	4
1.3 Packaging, transport, storage	6
1.4 Safety instructions.....	8
1.4.1. General hazards	8
1.4.2. Safety-conscious working	8
1.4.3. Special safety instructions	9
1.5 Warranty conditions	10
1.6 Conditions of utilization for CE-conform operation.....	11
1.7 Conditions of utilization for UL certification PSUP.....	12
1.8 Current on the mains PE (leakage current)	13
1.9 Supply networks	14
1.10 EC declaration of conformity PSUP	15
2. Device description	16
2.1 Meaning of the status LEDs - PSUP (mains module).....	16
2.2 Mounting and dimensions.....	17
2.2.1. Mounting and dimensions PSUP10	17
2.2.2. Mounting and dimensions PSUP20/PSUP30	18
2.3 PSUP Connections	19
2.3.1. Front connector	19
2.3.2. Connections on the device bottom.....	20
2.3.3. Connections of the axis combination.....	21
2.3.4. Control voltage 24VDC PSUP (mains module)	22
2.3.5. Mains supply PSUP (mains module) X41	23
2.3.6. Braking resistor / temperature switch PSUP (mains module)	26
2.4 Communication interfaces	28
2.4.1. Adjusting the basic address.....	28
3. Technical Characteristics	29
4. Index.....	32

1. Introduction

In this chapter you can read about:

Device assignment	4
Scope of delivery	4
Packaging, transport, storage	6
Safety instructions	8
Warranty conditions	10
Conditions of utilization for CE-conform operation.....	11
Conditions of utilization for UL certification PSUP	12
Current on the mains PE (leakage current)	13
Supply networks	14
EC declaration of conformity PSUP	15

1.1 Device assignment

This manual is valid for the following devices:

- ◆ PSUP10D6
- ◆ PSUP20D6
- ◆ PSUP30D6

1.2 Scope of delivery

The following items are furnished with the device:

- ◆ Manuals
 - ◆ Installation manual (German, English)
- ◆ Device accessories
 - Device accessories for PSUP
 - ◆ Matching plug for the PSUP connectors X9, X40, X41
 - ◆ 2 bus terminal connectors (BUS07/01) for mains module and the last axis controller in the combination

Type specification
plate: PSUP
(example)

  <p>LISTED (POWER CONV. EQ.) 14GZ</p>	Parker Hannifin GmbH Robert-Bosch-Straße 22 77656 Offenburg Tel. +49 (0) 781/509-0 www.parker-eme.com	
	PN: PSUP20D6USBM00 SN: 2828100002 Power Input *: 3*400VAC (50/60 Hz) , 44A Power Output *: 565VDC , 20kW Aux. Supply 24VDC, class 2 IP20 * see manual for further ratings (192-120147)	Tested: 21.07.2010 
Made in Germany		

Explanation:

1	Type designation The complete order designation of the device (2 - 4).
2	PSUPx0 :Mains module 3AC 230...480V, nominal power in 1kW (10=10kW) D6 : Designation nominal supply
3	Configuration and parameterization interface: USB :USB connection
4	Options: Mxx : I/O extension
5	Unique number of the particular device
6	Date of factory test
7	Nominal supply voltage: Power Input: Input supply data Power Output: Output data
8	CE compliance
9	UL certified (corresponding to the logo displayed on the device)

1.3 Packaging, transport, storage

Packaging material and transport



Caution!

The packaging material is inflammable, if it is disposed of improperly by burning, lethal fumes may develop.

The packaging material must be kept and reused in the case of a return shipment. Improper or faulty packaging may lead to transport damages.

Make sure to transport the drive always in a safe manner and with the aid of suitable lifting equipment (**Weight** (see on page 29)). Do never use the electric connections for lifting. Before the transport, a clean, level surface should be prepared to place the device on. The electric connections may not be damaged when placing the device.

First device checkup

- ◆ Check the device for signs of transport damages.
- ◆ Please verify, if the indications on the Type identification plate correspond to your requirements.
- ◆ Check if the consignment is complete.

Disposal

This product contains materials that fall under the special disposal regulation from 1996, which corresponds to the EC directory 91/689/EEC for dangerous disposal material. We recommend to dispose of the respective materials in accordance with the respectively valid environmental laws. The following table states the materials suitable for recycling and the materials which have to be disposed of separately.

Material Option	suitable for recycling	Disposal
Metal	yes	no
Plastic materials	yes	no
Circuit boards	no	yes

Please dispose of the circuit boards according to one of the following methods:

- ◆ Burning at high temperatures (at least 1200°C) in an incineration plant licensed in accordance with part A or B of the environmental protection act.
- ◆ Disposal via a technical waste dump which is allowed to take on electrolytic aluminum condensers. Do under no circumstances dump the circuit boards at a place near a normal waste dump.

Storage

If you do not wish to mount and install the device immediately, make sure to store it in a dry and clean environment. Make sure that the device is not stored near strong heat sources and that no metal chippings can get into the device.

Please note in the event of storage >1 year:

Forming the capacitors

Forming the capacitors only required with 400VAC axis controllers and PSUP mains module

If the device was stored longer than one year, the intermediate capacitors must be re-formed!

Forming sequence:

- ◆ Remove all electric connections
- ◆ Supply the device with 230VAC single phase for 30 minutes
 - ◆ via the L1 and L2 terminals on the device or
 - ◆ multi axis devices via L1 and L2 on the PSUP mains module

1.4 Safety instructions

In this chapter you can read about:

General hazards	8
Safety-conscious working	8
Special safety instructions	9

1.4.1. General hazards

General Hazards on Non-Compliance with the Safety Instructions

The device described in this manual is designed in accordance with the latest technology and is safe in operation. Nevertheless, the device can entail certain hazards if used improperly or for purposes other than those explicitly intended.

Electronic, moving and rotating components can

- ◆ constitute a hazard for body and life of the user, and
- ◆ cause material damage

Usage in accordance with intended purpose

The device is designed for operation in electric power drive systems (VDE0160). Motion sequences can be automated with this device. Several motion sequences can be combined by interconnecting several of these devices. Mutual interlocking functions must be incorporated for this purpose.

1.4.2. Safety-conscious working

This device may be operated only by qualified personnel.

Qualified personnel in the sense of these operating instructions consists of:

- ◆ Persons who, by virtue to their training, experience and instruction, and their knowledge of pertinent norms, specifications, accident prevention regulations and operational relationships, have been authorized by the officer responsible for the safety of the system to perform the required task and in the process are capable of recognizing potential hazards and avoiding them (definition of technical personnel according to VDE105 or IEC364),
- ◆ Persons who have a knowledge of first-aid techniques and the local emergency rescue services.
- ◆ persons who have read and will observe the safety instructions.
- ◆ Those who have read and observe the manual or help (or the sections pertinent to the work to be carried out).

This applies to all work relating to setting up, commissioning, configuring, programming, modifying the conditions of utilization and operating modes, and to maintenance work.

This manual and the help information must be available close to the device during the performance of all tasks.

1.4.3. Special safety instructions

- ◆ Check the correct association of the device and its documentation.
- ◆ Never detach electrical connections while voltage is applied to them.
- ◆ Safety devices must be provided to prevent human contact with moving or rotating parts.
- ◆ Make sure that the device is operated only when it is in perfect condition.
- ◆ Implement and activate the stipulated safety functions and devices.
- ◆ Operate the device only with the housing closed.
- ◆ Make sure that all devices are sufficiently fixed.
- ◆ Check that all live terminals are secured against contact. Perilous voltage levels of up to 850V occur.
- ◆ Do not bypass power direct current



Caution!

Due to movable machine parts and high voltages, the device can pose a lethal danger. Danger of electric shock in the case of non-respect of the following instructions. The device corresponds to DIN EN 61800-3, i.e. it is subject to limited sale. The device can emit disturbances in certain local environments. In this case, the user is liable to take suitable measures.

- ◆ The device must be permanently grounded due to high earth leakage currents.
- ◆ The drive motor must be grounded with a suitable protective lead.
- ◆ The devices are equipped with high voltage DC condensers. Before removing the protective cover, the discharging time must be awaited. After switching off the supply voltage, it may take up to 10 minutes to discharge the capacitors. Danger of electric shock in case of non respect.
- ◆ Before you can work on the device, the supply voltage must be switched off at the L1, L2 and L3 clamps. Wait at least 10 minutes so that the power direct current may sink to a secure value (<50V). Check with the aid of a voltmeter, if the voltage at the DC+ and DC- clamps has fallen to a value below 50V. Danger of electric shock in case of non respect.
- ◆ Do never perform resistance tests with elevated voltages (over 690V) on the wiring without separating the circuit to be tested from the drive.
- ◆ Please exchange devices only in currentless state and, in an axis system, only in a defined original state.
- ◆ In the event of a axis controller device exchange it is absolutely necessary to transfer the configuration determining the correct operation of the drive to the device, before the device is put into operation. Depending on the operation mode, a machine zero run will be necessary.
- ◆ The device contains electrostatically sensitive components. Please heed the electrostatic protection measures while working at/with the device as well as during installation and maintenance.
- ◆ Operation of the PSUP30 only with mains filter.



Attention - hot surface!

The heat dissipator can reach very high temperatures (>70°C)

Protective seals



Caution!

The user is responsible for protective covers and/or additional safety measures in order to prevent damages to persons and electric accidents.

Please note in the event of storage >1 year:

Forming the capacitors

Forming the capacitors only required with 400VAC axis controllers and PSUP mains module

If the device was stored longer than one year, the intermediate capacitors must be re-formed!

Forming sequence:

- ◆ Remove all electric connections
- ◆ Supply the device with 230VAC single phase for 30 minutes
 - ◆ via the L1 and L2 terminals on the device or
 - ◆ multi axis devices via L1 and L2 on the PSUP mains module

1.5 Warranty conditions

- ◆ The device must not be opened.
- ◆ Do not make any modifications to the device, except for those described in the manual.
- ◆ Make connections to the inputs, outputs and interfaces only in the manner described in the manual.
- ◆ Fix the devices according to the **mounting instructions** (see on page 17). We cannot provide any guarantee for other mounting methods.

Note on exchange of options

Device options must be exchanged in the factory to ensure hardware and software compatibility.

- ◆ When installing the device, make sure the heat dissipators of the device receive sufficient air and respect the recommended mounting distances of the devices with integrated ventilator fans in order to ensure free circulation of the cooling air.
- ◆ Make sure that the mounting plate is not exposed to external temperature influences.

1.6 Conditions of utilization for CE-conform operation

- Industry and trade -

The EC guidelines for electromagnetic compatibility 2004/108/EC and for electrical operating devices for utilization within certain voltage limits 2006/95/EC are fulfilled when the following boundary conditions are observed:

Operation of the devices only in the condition in which they were delivered, i.e. with all housing panels.

Mains filter: A mains filter is required in the mains input line if the motor cable exceeds a certain length. Filtering can be provided centrally at the system mains input or separately for each axis system.

Use of the devices in the industrial area (limit values class C3 in accordance with EN 61800-3)

The following mains filters are available for independent utilization:

Device: PSU	Limit value class	Reference: Axis system with motor cable	Mains filter Order No.:
P10	C3	< 6 x 10 m	NFI03/01
P10	C3	< 6 x 50 m	NFI03/02
P20	C3	< 6 x 50 m	NFI03/03
P30	C3	< 6 x 50 m	NFI03/03

Connection length: Connection between mains filter and device:

unshielded: < 0.5 m

shielded < 5 (fully shielded on ground - e.g. ground of control cabinet)

Grounding: Connect the filter housing and the device to the cabinet frame, making sure that the contact area is adequate and that the connection has low resistance and low inductance.

Never mount the filter housing and the device on paint-coated surfaces!

Cable installation:

- ◆ Signal lines and power lines should be installed as far apart as possible.
- ◆ Signal lines should never pass close to excessive sources of interference (motors, transformers, contactors etc.).
- ◆ Do not place mains filter output cable parallel to the load cable.

Accessories: Make sure to use only the accessories recommended by Parker

Connect all cable shields at both ends, ensuring large contact areas!

Warning: This is a product in the restricted sales distribution class according to EN 61800-3. In a domestic area this product can cause radio frequency disturbance, in which case the user may be required to implement appropriate remedial measures.

1.7 Conditions of utilization for UL certification PSUP

UL certification for mains modules PSUP

Conform to UL:	◆ according to UL508C
Certified	◆ E-File_No.: E235342

The UL certification is documented by a "UL" logo on the device (type specification plate).



UL approval PSUP30 in preparation!

Conditions of utilization

- ◆ The devices are only to be installed in a degree of contamination 2 environment (maximum).
- ◆ The devices must be appropriately protected (e.g. by a switching cabinet).
- ◆ Tightening torque of the field wiring terminals (green Phoenix plugs)

Device	X40: Ballast resistor	X41: Mains connector	X9: 24VDC
PSUP10	0.5 Nm (4.43Lb.in)	1.2 Nm (10.62Lb.in)	1.2 Nm (10.62Lb.in)
PSUP20	0.5 Nm (4.43Lb.in)	1.7 Nm (15Lb.in)	1.2 Nm (10.62Lb.in)
PSUP30	UL approval in preparation		

- ◆ Temperature rating of field installed conductors shall be at least 60°C Use copper lines only
Please use the cables described in the accessories chapter, they feature a temperature rating of at least 60°C.
- ◆ Maximum Surrounding Air Temperature: 40°C.
- ◆ Suitable for use on a circuit capable of delivering not more than 5000 rms symmetrical amperes and 480 volts maximum.
- ◆ Control voltage supply (24VDC) only permissible with "class 2" power supply.

Circuit breakers

PSUP10

Maximum fuse rating per device (=short circuit rating)	Measure for line and device protection: MCB miniature circuit breaker (K characteristic) 25A in accordance with UL category DIVQ Recommendation: (ABB) S203UP-K25 (480VAC)
---	--

PSUP20

Maximum circuit breaker rating per device (=short circuit rating) 2 special purpose fuses in line are required	Cable protection measure: MCB (K characteristic) with a rating of 50A / 4xxVAC (depending on the input voltage) Recommendation: (ABB) S203P-K50 (440VAC) Device protection measure: Circuit breakers 80A / 700VAC per supply leg in accordance with UL category JFHR2 Requirement: Bussmann 170M1366 or 170M1566D
---	--

**Caution!**

Danger of electric shock.
Discharge time of the bus capacitor is 10 minutes.

Line cross-sections of the power connections

Maximum cross-section limited by the terminals mm² / AWG

PSUP10	Mains supply: 0.5 ... 6 mm ² (AWG: 20 ... 10) Braking resistor: 0.25 ... 4 mm ² (AWG: 23 ... 11)
PSUP20 & PSUP30	Mains supply: 0.5 ... 16 mm ² (AWG: 20 ... 6) Braking resistor: 0.25 ... 4 mm ² (AWG: 23 ... 11)

1.8 Current on the mains PE (leakage current)

**Caution!**

This product can cause a direct current in the protective lead. If a residual current device (RCD) is used for protection in the event of direct or indirect contact, only a type B (all current sensitive) RCD is permitted on the current supply side of this product. Otherwise, a different protective measure must be taken, such as separation from the environment by doubled or enforced insulation or separation from the mains power supply by means of a transformer.

Please heed the connection instructions of the RCD supplier.

Mains filters do have high leakage currents due to their internal capacity. An internal mains filter is usually integrated into the servo controllers. Additional leakage currents are caused by the capacities of the motor cable and of the motor windings. Due to the high clock frequency of the power output stage, the leakage currents do have high-frequency components. Please check if the FI protection switch is suitable for the individual application.

If an external mains filter is used, an additional leakage current will be produced.

The figure of the leakage current depends on the following factors:

- ◆ Length and properties of the motor cable
- ◆ Switching frequency
- ◆ Operation with or without external mains filter
- ◆ Motor cable with or without shield network
- ◆ Motor housing grounding (how and where)

Remark:

- ◆ The leakage current is important with respect to the handling and usage safety of the device.
- ◆ A pulsing leakage current occurs if the supply voltage is switched on.

Please note:


The device must be operated with effective grounding connection, which must comply with the local regulations for high leakage currents (>3.5mA).

Due to the high leakage currents it is not advisable to operate the servo drive with an earth leakage circuit breaker.


1.9 Supply networks

This product is designed for fixed connection to TN networks (TN-C, TN-C-S or TN-S). Please note that the line-earth voltage may not exceed 300VAC.

- ◆ When grounding the neutral conductor, mains voltages of up to 480VAC are permitted.

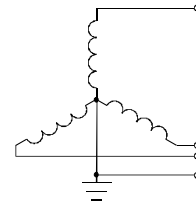

- ◆ When grounding an external conductor (delta mains, two-phase mains), mains voltages (external conductor voltages) of up to 240VAC are permitted.

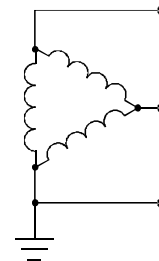

Devices which are to be connected to an IT network must be provided with a separating transformer. Then the devices are operated locally as in a TN network. The secondary sided center of the separating transformer must be grounded and connected to the PE connector of the device.

1.10 EC declaration of conformity PSUP



Parker Hannifin GmbH

Robert-Bosch-Straße 22
D-77656 Offenburg

Tel.: +49 (0) 781-509-0
Fax.: +49 (0) 781-509-98

www.parker-eme.com

CE KONFORMITÄTSERKLÄRUNG CE DECLARATION OF CONFORMITY

Dokumenten Nr. **DoC004-R 2.0**
Declaration N.

Firma **Parker Hannifin GmbH**
Manufacturer

Anschrift **Robert-Bosch-Straße 22**
Address
77656 Offenburg
Deutschland

Produkt **Netzversorgungs-Einheit**
Product
PSU – Power Supply Unit

Produktname **Mehrachsfamilien**
Product name
Multi axis families

Die Konformität der Produkte wird vermutet, durch die Einhaltung folgender Normen:
The above products are in accordance with the relevant clauses from following standards:

Norm / Standard	Titel / Title	Ausgabe / Edition
DIN EN 61800-5-1	Elektrische Leistungsantriebssysteme mit einstellbarer Drehzahl Teil 5-1: Anforderungen an die Sicherheit – Elektrische, thermische und energetische Anforderungen <i>Adjustable speed electrical power drive systems Part 5-1: Safety Requirements- Electrical, thermal and energy</i>	2008-04
DIN EN 61800-3	Drehzahlveränderbare elektrische Antriebe Teil 3: EMV-Anforderungen einschließlich spezieller Prüfverfahren <i>Adjustable speed electrical power drive systems Part 3: EMC product standard including specific test methods.</i>	2005-7

Bemerkungen / Notes:

Den im Produkthandbuch beschriebenen Sicherheits-, Installations- und Bedienungshinweisen muss Folge geleistet werden.

*These products must be installed and operated with reference to the instructions in the Product Manual.
All instructions, warnings and safety information of the Product Manual must be adhered to.*

Die Produkte entsprechen den Anforderungen der Niederspannungs-Richtlinie 2006/95/EG und der EMV-Richtlinie 2004/108/EG.

The products are in accordance to the Low Voltage Directive 2006/95/EC and EMC Directive 2004/108/EC.

Die Produkte sind für den Einbau in eine andere Maschine bestimmt. Die Inbetriebnahme ist solange untersagt, bis die Konformität des Endproduktes gemäß der Maschinen-Richtlinie 2006/42/EG festgestellt ist.

The products are components to be incorporated into machinery and may not be operated alone. The complete machinery or installation may only be put into service when the safety considerations of the Machinery Directive 2006/42/EC are fully adhered to.

Offenburg, 14/09/2010

Jürgen Killius, Operations Manager

Parker Hannifin GmbH
Sitz: Bielefeld HRB 35489
USt.-IdNr.: DE 122 802 922
Steuernummer: 5349 5747 1543

Commerzbank Offenburg
BLZ 664 400 84
Konto-Nr. 45 0 19 12 00
BIC/Swift-Code: COBADEFF
IBAN DE95 6644 0084 0450 1912 00

Geschäftsführung:
Dr. Gerd Scheffel, Günter Schrank, Christian Stein, Kees Veraart
Vorsitzender des Aufsichtsrates: Hansgeorg Greuner

2. Device description

In this chapter you can read about:

Meaning of the status LEDs - PSUP (mains module).....	16
Mounting and dimensions.....	17
PSUP Connections.....	19
Communication interfaces	28

2.1 Meaning of the status LEDs - PSUP (mains module)

PSUP Status LEDs	Left LED (green)	Right LED (red)
Control voltage 24 VDC is missing	off	off
Error of mains module*	off	on
DC power voltage is built up	-	flashes quickly
Phase failure / mains power supply undervoltage	on	flashes slowly
Address assignment CPU active	flashes quickly	-
Address assignment CPU completed	flashes slowly	-
PSUPxx Ready - State	on	off
Incorrect wiring of internal communication X30/31	flashes slowly	flashes quickly
Device in bootloader state	flashes slowly	flashes slowly

*can be read out in each axis controller



Caution!

When the control voltage is missing there is no indication whether or not high voltage supply is available.

Autoryzowany dystrybutor Parker:

ARA

PNEUMATIK

53-012 Wrocław tel. 71 364 72 82
ul. Wyścigowa 38 fax 71 364 72 83

www.arapneumatik.pl



2.2 Mounting and dimensions

Ventilation: During operation, the device radiates heat (power loss). Please provide for a sufficient mounting distance below and above the device in order to ensure free circulation of the cooling air. Please do also respect the recommended distances of other devices. Make sure that the mounting plate is not exhibited to other temperature influences than that of the devices mounted on this very plate. The devices must be mounted vertically on a level surface. Make sure that all devices are sufficiently fixed.

2.2.1. Mounting and dimensions PSUP10


The devices are force-ventilated via a ventilator fan fixed to the lower part of the heat dissipator!

Mounting spacing: At the top and below: at least 100mm

Information on PSUP10D6

Mounting:

2 socket head screws M5

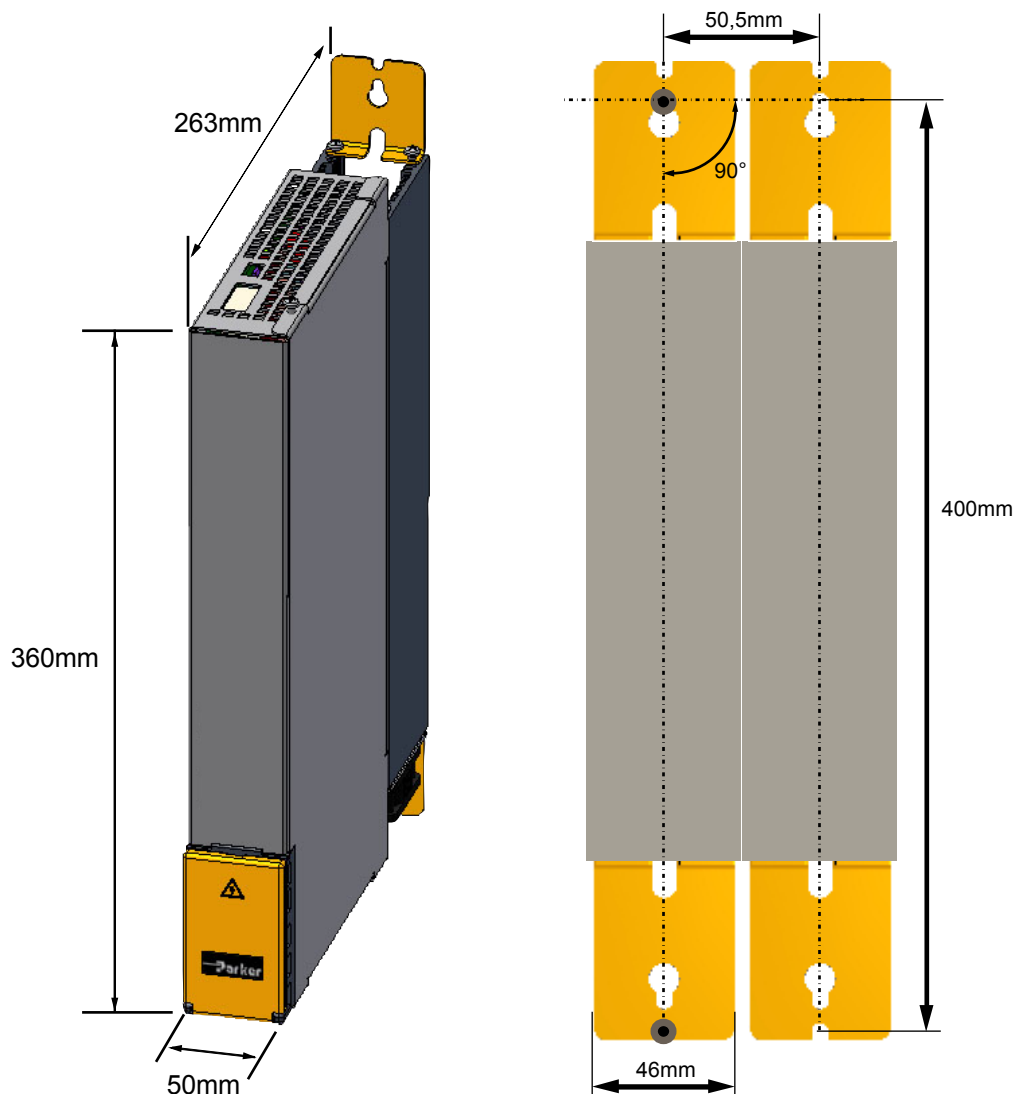


Tolerances: DIN ISO 2768-f

2.2.2. Mounting and dimensions PSUP20/PSUP30

Information on PSUP20/PSUP30

Mounting:

4 socket head screws M5

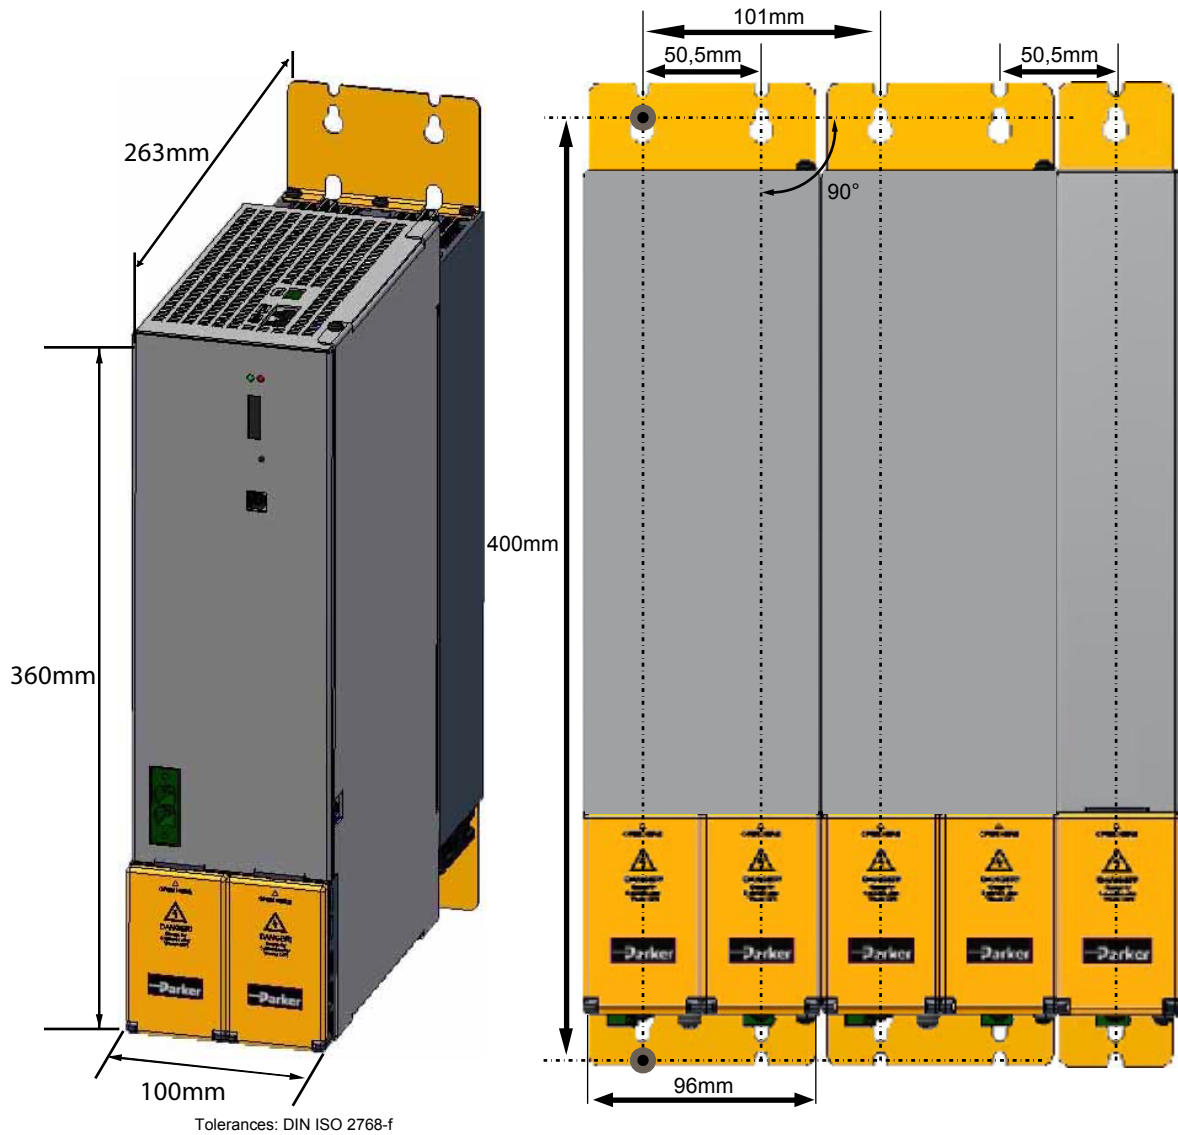

2.3 PSUP Connections

In this chapter you can read about:

Front connector 19
 Connections on the device bottom 20
 Connections of the axis combination 21
 Control voltage 24VDC PSUP (mains module) 22
 Mains supply PSUP (mains module) X41 23
 Braking resistor / temperature switch PSUP (mains module) 26

2.3.1. Front connector



P	Mains module PSUP
LED1	Status LEDs Mains module
S1	Basic address
X3	Configuration interface (USB)
X9	Supply voltage 24VDC
1	Behind the yellow protective covers you can find the rails for the supply voltage connection. ♦ Supply voltage 24VDC ♦ DC power voltage supply

2.3.2. Connections on the device bottom



Caution - Risk of Electric Shock!

Always switch devices off before wiring them!

Dangerous voltages are still present until 10 min. after switching off the power supply.



Caution!

When the control voltage is missing there is no indication whether or not high voltage supply is available.




Attention - PE connection!

PE connection with 10mm² via a grounding screw at the bottom of the device.



Attention - hot surface!

The heat dissipator can reach very high temperatures (>70°C)

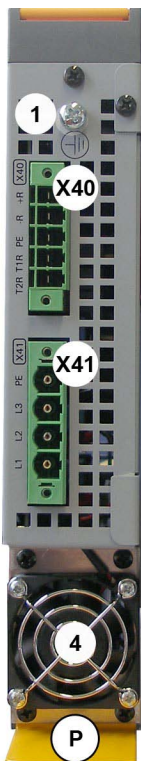

P	Mains module PSUP
X40	Ballast resistor
X41	Power supply
1	Central ground connection for the axis system, with 10mm ² to the ground screw on the housing.
4	Fan*

* is internally supplied.

Line cross-sections of the power connections

PSUP10	Mains supply: 0.5 ... 6 mm ² (AWG: 20 ... 10) Braking resistor: 0.25 ... 4 mm ² (AWG: 23 ... 11)
PSUP20 & PSUP30	Mains supply: 0.5 ... 16 mm ² (AWG: 20 ... 6) Braking resistor: 0.25 ... 4 mm ² (AWG: 23 ... 11)

2.3.3. Connections of the axis combination

The axis controllers are connected to the supply voltages via rails.

- ◆ Supply voltage 24VDC
- ◆ DC power voltage supply

The rails can be found behind the yellow protective covers. In order to connect the rails of the devices, you may have to remove the yellow plastic device inserted at the side.

CAUTION: Risk of Electric Shock



Caution - Risk of Electric Shock!

Please note before opening:

- ◆ **Warning** - Possible risk of electric shock; disconnect power before removing cover.
- ◆ **Caution!** - Dangerous electric voltage! Respect discharge time.



Caution - Risk of Electric Shock!

Always switch devices off before wiring them!

Dangerous voltages are still present until 10 min. after switching off the power supply.



Caution!

When the control voltage is missing there is no indication whether or not high voltage supply is available.


Protective seals



Caution - Risk of Electric Shock!

In order to secure the contact protection against the alive rails, it is absolutely necessary to respect the following:

- ◆ Insert the yellow plastic comb at the left or right of the rails.
Make sure that the yellow plastic combs are placed at the left of the first device and at the right of the last device in the system and have not been removed.
- ◆ Setup of the devices only with closed protective covers.

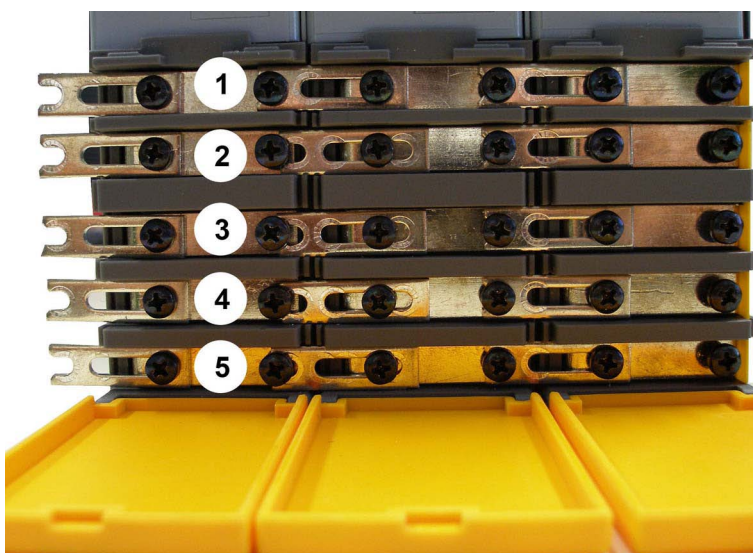

- | | |
|---|--------|
| 1 | 24VDC |
| 2 | GND24V |
| 3 | -HV DC |
| 4 | PE |
| 5 | +HV DC |

Note: External components **may not** be connected to the rail system.

Maximum capacity in the axis system:

- ◆ PSUP10: 2400 μF
- ◆ PSUP20 & PSUP30: 5000 μF

Reference value for the required capacity in an axis system

100 μF per kW of the temporal medium value of the total power (transmissions + power dissipation) in the axis system

Example: PSUP20 (1175 μF) with one axis controller (440 μF)


Total power 15 kW, 100 $\mu\text{F}/\text{kW}$ => 1500 μF required in the axis system.

Axis system: 1615 μF are sufficient.

Protective seals**Caution!**

The user is responsible for protective covers and/or additional safety measures in order to prevent damages to persons and electric accidents.

2.3.4. Control voltage 24VDC PSUP (mains module)

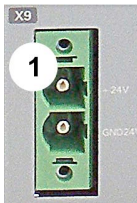Connector X9

Pin	Designation
1	+24 V
2	GND24V

Line cross sections:

minimum: 0.5mm² with conductor sleeve

maximum: 6mm² with conductor sleeve

(AWG: 20 ... 10)

Control voltage 24 VDC PSUP

Device type	PSUP
Voltage range	21 - 27VDC
Ripple	0.5Vpp
Requirement according to safe extra low voltage (SELV)	yes (class 2 mains module)
Current drain PSUP	PSUP10: 0.2A PSUP20 / PSUP30: 0.3A


2.3.5. Mains supply PSUP (mains module) X41

Device protection

By cyclically switching on and off the power voltage, the input current limitation can be overloaded, which may cause damage to the device.

Wait at least one minute between two switching on processes!

Operation of the PSUP30 only with mains filter!

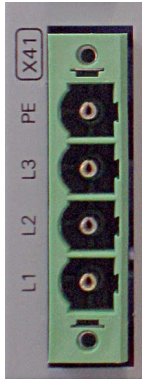

Connector X41

Pin	Designation
PE	Earth conductor
L3	Phase 3
L2	Phase 2
L1	Phase 1

Mains connection PSUP10D6

Device type PSUP10	230V	400V	480V
Supply voltage	230VAC ±10% 50-60Hz	400VAC ±10% 50-60Hz	480VAC ±10% 50-60Hz
Rated voltage	3AC 230V	3AC 400V	3AC 480V
Input current	22Arms	22Arms	18Arms
Output voltage	325VDC ±10%	565VDC ±10%	680VDC ±10%
Output power	6kW	10 kW	10 kW
Pulse power (<5s)	12kW	20kW	20kW
Power dissipation	60W	60W	60W
Maximum fuse rating per device (=short circuit rating)	Measure for line and device protection: MCB miniature circuit breaker (K characteristic) 25A in accordance with UL category DIVQ Recommendation: (ABB) S203UP-K25 (480VAC)		

Mains connection PSUP20D6

Device type PSUP20	230V	400V	480V
Supply voltage	230VAC ±10% 50-60Hz	400VAC ±10% 50-60Hz	480VAC ±10% 50-60Hz
Rated voltage	3AC 230V	3AC 400V	3AC 480V
Input current	44Arms	44Arms	35Arms
Output voltage	325VDC ±10%	565VDC ±10%	680VDC ±10%
Output power	12kW	20kW	20kW
Pulse power (<5s)	24kW	40kW	40kW
Power dissipation	120W	120W	120W
Maximum circuit breaker rating per device (=short circuit rating) 2 special purpose fuses in line are required	Cable protection measure: MCB (K characteristic) with a rating of 50A / 4xVAC (depending on the input voltage) Recommendation: (ABB) S203P-K50 (440VAC) Device protection measure: Circuit breakers 80A / 700VAC per supply leg in accordance with UL category JFHR2 Requirement: Bussmann 170M1366 or 170M1566D		

PSUP30D6 Mains connection

Device type PSUP30	230V	400V	480V
Supply voltage	230VAC ±10% 50-60Hz	400VAC ±10% 50-60Hz	480VAC ±10% 50-60Hz
Rated voltage	3AC 230V	3AC 400V	3AC 480V
Input current	50Arms	50Arms	42Arms
Output voltage	325VDC ±10%	565VDC ±10%	680VDC ±10%
Output power	17kW	30kW	30kW
Pulse power (<5s)	34kW	60kW	60kW
Power dissipation	140W	140W	140W
Maximum circuit breaker rating per device (=short circuit rating) 2 special purpose fuses in line are required	Cable protection measure: MCB (K characteristic) with a rating of 63A / 4xxVAC (depending on the input voltage) Recommendation: (ABB) S203P-K63 (440VAC) Device protection measure: Circuit breakers 125A / 700VAC per supply leg in accordance with UL category JFHR2 Requirement: Bussmann 170M1368 or 170M1568D		

Caution!

Only three-phase operation of the PSUP devices is permitted!


The PSUP30 mains module may only be operated with mains filter

Required mains filter for the PSUP30: 0.45 mH / 55 A


We offer the following mains filters:

- ◆ LCG-0055-0.45 mH (WxDxH: 180 mm x 140 mm x 157 mm; 10 kg)
- ◆ LCG-0055-0.45 mH-UL (with UL approval) (WxDxH: 180 mm x 170 mm x 157 mm; 15 kg)

Dimensional drawing: LCG-0055-0.45 mH

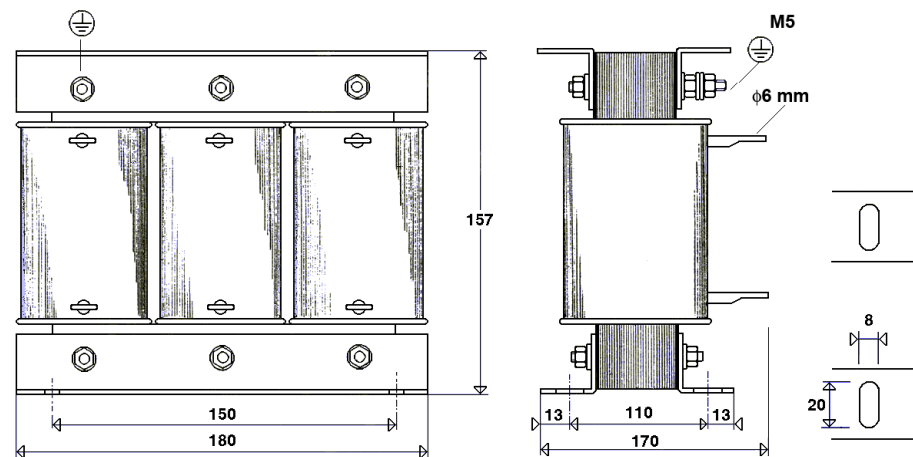

Dimensional drawing: LCG-0055-0.45 mH-UL

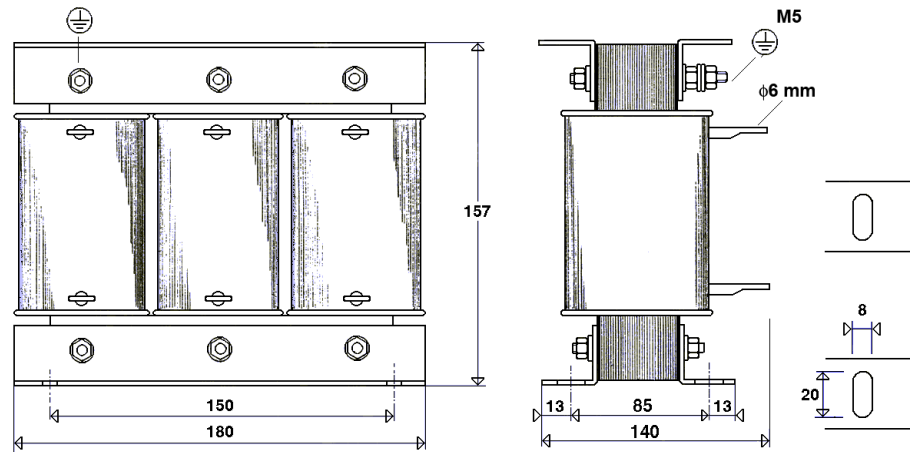


Caution - Risk of Electric Shock!

Always switch devices off before wiring them!


Dangerous voltages are still present until 10 min. after switching off the power supply.

2.3.5.1 LCG-0055-0.45 Mains filter dimensions

Dimensional drawing: LCG-0055-0.45 mH

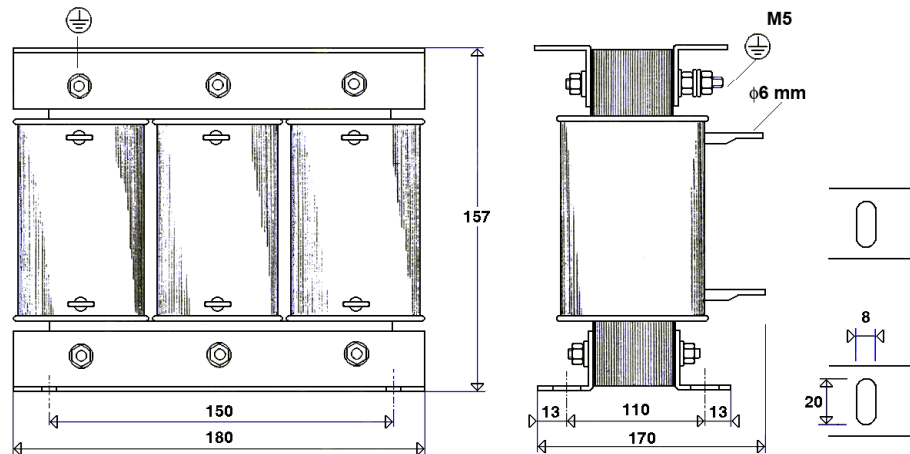


Dimensional drawing: LCG-0055-0.45 mH-UL

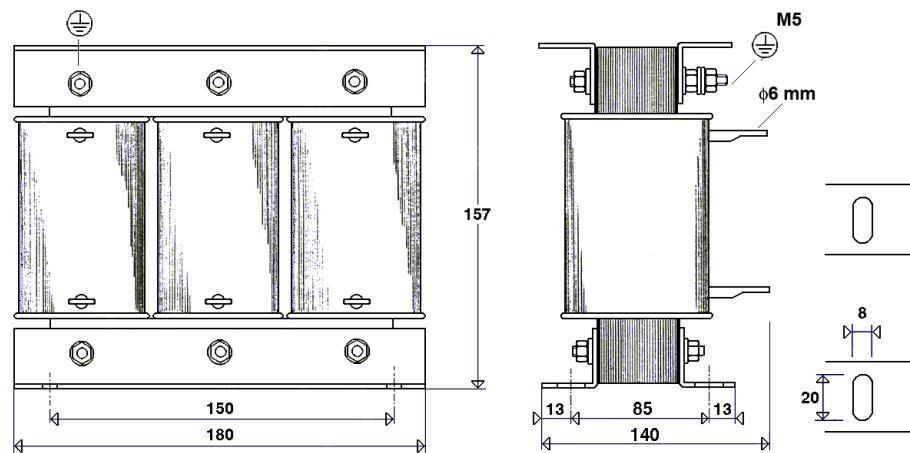

2.3.6. Braking resistor / temperature switch PSUP (mains module)

The energy generated during braking operation must be dissipated via a braking resistor.

Connector X40

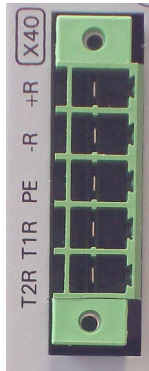

Pin	Description	
+R	+ Braking resistor	short-circuit proof!
-R	- Braking resistor	
PE	PE	
T1R	Temperature Switch	
T2R	Temperature Switch	

Braking operation PSUPxxD6 (mains module)

Device type	PSUP10	PSUP20	PSUP30
Capacitance / storable energy	550 μ F/ 92 Ws at 400 V 53 Ws at 480 V	1175 μ F/ 197 Ws at 400 V 114 Ws at 480 V	1175 μ F/ 197 Ws at 400 V 114 Ws at 480 V
Minimum braking-resistance	27 Ω	15 Ω	10 Ω
Recommended nominal power rating	500 ... 1500 W	500 ... 3500 W	500 ... 5000 W
Pulse power rating for 1s	22 kW	40 kW	60 kW
Maximum permissible continuous current	13 A	15 A	15 A

Maximum capacity in the axis system:

- ◆ PSUP10: 2400 μ F
- ◆ PSUP20 & PSUP30: 5000 μ F

Reference value for the required capacity in an axis system

100 μ F per kW of the temporal medium value of the total power (transmissions + power dissipation) in the axis system

Example: PSUP20 (1175 μ F) with one axis controller (440 μ F)

Total power 15 kW, 100 μ F/kW => 1500 μ F required in the axis system.

Axis system: 1615 μ F are sufficient.

Connection of a braking resistor on PSUP (mains module)

Minimum line cross section:	1.5 mm ²
Maximum line length:	2 m
Maximum intermediate circuit voltage:	810 VDC
Switch-on threshold:	780 VDC
Hysteresis	20 VDC

2.3.6.1 Temperature switch PSUP (mains module)

Connector X40 Pin T1R, T2R

Temperature monitoring:

The temperature switch (normally closed contact) must be connected, unless an error message will be issued.

Temperature switch/relay

No galvanic separation, the temperature sensor (normally closed contact) must comply with the safe separation according to EN 60664.

If there is no temperature monitoring due to the connected braking resistor, the T1R and T2R connections must be connected by a jumper.



Caution!

Without temperature monitoring, the braking resistor might be destroyed.

2.4 Communication interfaces

2.4.1. Adjusting the basic address

On the mains module, the basic address of the device combination is set in steps of 16 with the aid of the first three dip switches.

The mains module contains the set basic address while the axes placed at the right in the combination contain the following addresses.



Switch S1

Address setting

Basic addresses

Switch	Value upon ON
1	16
2	32
3	64

Settings:

left: OFF

right: ON

Settable value range: 0, 16, 32, 48, 64, 80, 96, 112

Address of the 1st axis = basic address+1

The addresses of the axis controllers are newly assigned after PowerOn.

Example:

Basic address = 48; mains module with 6 axis controllers in the combination

1. Axis right: Address = 49

2. Axis right: Address = 50

...

6. Axis right: Address = 54

3. Technical Characteristics

Size / weight PSUP

Device type	Dimensions HxWxD [mm]	Weight [kg]
PSUP10D6	360 x 50 x 263	3.95
PSUP20D6 & PSUP30D6	360 x 100 x 263	6.3

Protection type IP20

Mains connection PSUP10D6

Device type PSUP10	230V	400V	480V
Supply voltage	230VAC ±10% 50-60Hz	400VAC ±10% 50-60Hz	480VAC ±10% 50-60Hz
Rated voltage	3AC 230V	3AC 400V	3AC 480V
Input current	22Arms	22Arms	18Arms
Output voltage	325VDC ±10%	565VDC ±10%	680VDC ±10%
Output power	6kW	10 kW	10 kW
Pulse power (<5s)	12kW	20kW	20kW
Power dissipation	60W	60W	60W
Maximum fuse rating per device (=short circuit rating)	Measure for line and device protection: MCB miniature circuit breaker (K characteristic) 25A in accordance with UL category DIVQ Recommendation: (ABB) S203UP-K25 (480VAC)		

Mains connection PSUP20D6

Device type PSUP20	230V	400V	480V
Supply voltage	230VAC ±10% 50-60Hz	400VAC ±10% 50-60Hz	480VAC ±10% 50-60Hz
Rated voltage	3AC 230V	3AC 400V	3AC 480V
Input current	44Arms	44Arms	35Arms
Output voltage	325VDC ±10%	565VDC ±10%	680VDC ±10%
Output power	12kW	20kW	20kW
Pulse power (<5s)	24kW	40kW	40kW
Power dissipation	120W	120W	120W
Maximum circuit breaker rating per device (=short circuit rating) 2 special purpose fuses in line are required	Cable protection measure: MCB (K characteristic) with a rating of 50A / 4xxVAC (depending on the input voltage) Recommendation: (ABB) S203P-K50 (440VAC) Device protection measure: Circuit breakers 80A / 700VAC per supply leg in accordance with UL category JFHR2 Requirement: Bussmann 170M1366 or 170M1566D		

PSUP30D6 Mains connection

Device type PSUP30	230V	400V	480V
Supply voltage	230VAC ±10% 50-60Hz	400VAC ±10% 50-60Hz	480VAC ±10% 50-60Hz
Rated voltage	3AC 230V	3AC 400V	3AC 480V
Input current	50Arms	50Arms	42Arms
Output voltage	325VDC ±10%	565VDC ±10%	680VDC ±10%
Output power	17kW	30kW	30kW
Pulse power (<5s)	34kW	60kW	60kW
Power dissipation	140W	140W	140W
Maximum circuit breaker rating per device (=short circuit rating) 2 special purpose fuses in line are required	Cable protection measure: MCB (K characteristic) with a rating of 63A / 4xxVAC (depending on the input voltage) Recommendation: (ABB) S203P-K63 (440VAC) Device protection measure: Circuit breakers 125A / 700VAC per supply leg in accordance with UL category JFHR2 Requirement: Bussmann 170M1368 or 170M1568D		

Control voltage 24 VDC PSUP

Device type	PSUP
Voltage range	21 - 27VDC
Ripple	0.5Vpp
Requirement according to safe extra low voltage (SELV)	yes (class 2 mains module)
Current drain PSUP	PSUP10: 0.2A PSUP20 / PSUP30: 0.3A

UL certification for mains modules PSUP

Conform to UL:	◆ according to UL508C
Certified	◆ E-File_No.: E235342

The UL certification is documented by a “UL” logo on the device (type specification plate).



UL approval PSUP30 in preparation!

Insulation requirements

Enclosure rating	Protection class in accordance with EN 60664-1
Protection against human contact with dangerous voltages	In accordance with EN 61800-5-1
Overvoltage category	Voltage category III in accordance with EN 60664-1
Degree of contamination	Degree of contamination 2 in accordance with EN 60664-1 and EN 61800-5-1

Ambient conditions PSUP

General ambient conditions	In accordance with EN 60 721-3-1 to 3-3 Climate (temperature/humidity/barometric pressure): Class 3K3	
Permissible ambient temperature:	Class 3K3	
Operation	0 to +40 °C	
storage	-25 to +70 °C	
transport	-25 to +70 °C	
Tolerated humidity:	no condensation	
Operation	<= 85% class 3K3	(Relative humidity)
storage	<= 95%	
transport	<= 95%	
Elevation of operating site	<=1000m above sea level for 100% load ratings <=2000m above sea level for 1% / 100m power reduction please inquire for greater elevations	
Sealing	Protection type IP20 in accordance with EN 60 529	
Mechanic resonances:	Class 2M3, 20m/s ² ;8-200Hz	

Cooling PSUP

Cooling mode:	Forced air ventilation with fan in the heat dissipator
----------------------	--

EMV limit values PSUP

EMC interference emission	Limit values in accordance with EN 61 800-3, Limit value class C3 with mains filter.
EMC disturbance immunity	Industrial area limit values in accordance with EN 61 800-3

EC directives and applied harmonized EC norms

EC low voltage directive 2006/95/EG	EN 61800-5-1 , Standard for electric power drives with settable speed; requirements to electric safety EN 60664-1 , isolation coordinates for electrical equipment in low-voltage systems EN 60204-1, machinery norm partly applied
EC-EMC-directive 2004/108/EC	EN 61800-3, EMC standard Product standard for variable speed drives

4. Index

A

Adjusting the basic address - 28

B

Braking resistor / temperature switch PSUP (mains module) - 26

C

Capacitors - 7

Communication interfaces - 28

Conditions of utilization for CE-conform operation - 11

Conditions of utilization for UL certification PSUP - 12

Connections of the axis combination - 21

Connections on the device bottom - 20

Control voltage 24VDC PSUP (mains module) - 22

Current on the mains PE (leakage current) - 13

D

Device assignment - 4

Device description - 16

E

EC declaration of conformity PSUP - 15

F

Front connector - 19

G

General hazards - 8

I

Introduction - 4

L

LCG-0055-0.45 Mains filter dimensions - 25

LEDs - 16

M

Mains supply PSUP (mains module) X41 - 23

Meaning of the status LEDs - PSUP (mains module) - 16

Mounting and dimensions - 17

Mounting and dimensions PSUP10 - 17

Mounting and dimensions PSUP20/PSUP30 - 18

P

Packaging, transport, storage - 6

PSUP Connections - 19

S

Safety instructions - 8

Safety-conscious working - 8

Scope of delivery - 4

Special safety instructions - 9

Status LEDs - 16

Storage - 7

Supply networks - 14

T

Technical Characteristics - 29

Temperature switch PSUP (mains module) - 27

U

Usage in accordance with intended purpose - 8

W

Warranty conditions - 10

Autoryzowany dystrybutor Parker:

ARA

PNEUMATIK

53-012 Wrocław tel. 71 364 72 82
ul. Wyścigowa 38 fax 71 364 72 83

www.arapneumatik.pl

