






\emptyset 16,5 25 40		KOLANA 90°					
		Transair®	ØD	ØG	L	Z	Kg
		6602 17 00	16,5	34	58	31	0,065
		6602 25 00	25	44,5	69,5	40	0,120
6602 40 00	40	67	103	62	0,410		

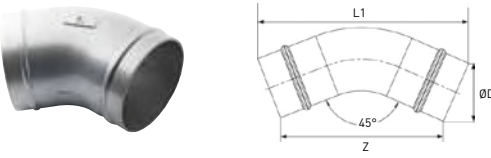
\emptyset 50 63		KOLANA 90°					
		Transair®	ØD	ØG	L	Z	Kg
		6602 50 00	50	80	116	56	0,804
		6602 63 00	63	91	124	61	0,970

\emptyset 76 100 168		KOLANA 90°				
		Transair®	ØD	H	Z	Kg
		RX02 L1 00	76	227	189	1,033
		RX02 L3 00	100	278	227	1,417
RA02 L8 00	168	269	185	3,074		

Aby przyłączyć kolano 90° RX02 lub RA02 do rur Transair® należy użyć 2-ch złączy prostych RR01.

\emptyset 25 40		KOLANA 45°					
		Transair®	ØD	ØG	L	Z	Kg
		6612 25 00	25	44,5	61,5	32,5	0,115
		6612 40 00	40	67	90	45	0,370

\emptyset 50 63		KOLANA 45°					
		Transair®	ØD	ØG	L	Z	Kg
		6612 50 00	50	80	98	38	0,771
		6612 63 00	63	91	100	37	0,906

\emptyset 76 100 168		KOLANA 45°				
		Transair®	ØD	L1	Z	Kg
		RX12 L1 00	76	235,5	122	0,704
		RX12 L3 00	100	271,4	138	1,309
RA12 L8 00	168	310,5	147,5	2,366		

Aby przyłączyć kolano 45° RX12 lub RA12 do rur Transair® należy użyć 2-ch złączy prostych RR01.

