


ZŁĄCZA RUROWE I ZŁĄCZA Z GWINTEM


Ø
16,5
25
40

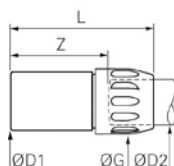

REDUKCJE WTYKOWE


Transair®	ØD1	ØD2	ØG	Z	L	Kg
6666 17 25	25	16,5	34	51	77	0,052
6666 25 40	40	25	44,5	71	100,5	0,126

Ø
50
63

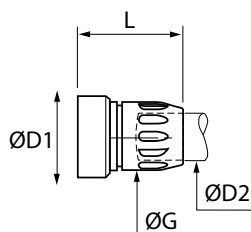

Transair®	ØD1	ØD2	ØG	L	Kg
6666 25 50	50	25	45	97	0,210
6666 40 50	50	40	67	116	0,317
6666 40 63	63	40	67	120	0,373
6666 50 63	63	50	80	125	0,520


Ø
76
100
168

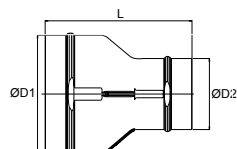

Transair®	ØD1	ØD2	L	Kg
RX64 L1 50	76	50	220	0,530
RX64 L1 63	76	63	230	0,584
RX64 L3 50	100	50	343	1,290
RX64 L3 63	100	63	250	0,850
RX66 L3 L1	100	76	192,5	0,702
RA66 L8 L1	168	76	210	1,388
RA66 L8 L3	168	100	210	1,502

Do przyłączenia redukcji RX64 i RX66 do rur Transair® należy użyć złączy prostych RR01 i 6606.

Ø
16,5
25
40

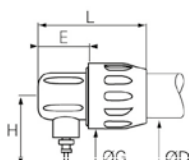


ZAŚLEPKA Z ODPOWIERZENIEM

Transair®	ØD	E	ØG	H	L	Kg
6625 17 00	16,5	25,5	34	45,5	62,5	0,145
6625 25 00	25	33	45	47	75	0,061
6625 40 00	40	34,5	67	54	98,5	0,180

Model Ø16,5 jest wyposażony w zatyczkę Ø8.

Modele Ø25 i Ø40 są wyposażone w zatyczkę Ø8 mm.


Ø
50
63

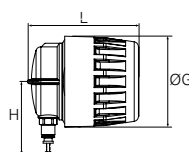

Transair®	ØD	ØG	H	L	Kg
6625 50 00	50	80	67	107	0,423
6625 63 00	63	91	72,5	111	0,496

Wyposażone w zatyczkę Ø8 mm.

Ø
76
100
168

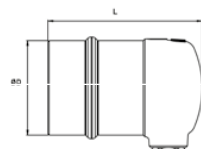

Transair®	ØD	L	Kg
RA25 L1 04	76	123	0,642
RA25 L3 04	100	123	0,929
RA25 L8 04	168	116	1,200

Do przyłączenia RA25 do rur Transair® należy użyć złączy proste RR01. Wyposażony w zaślepkę 1/2".

