

Moduflex IO-Link Modules

P2M2HBVL12400xxx



USER MANUAL





Important !

Before carrying out any service work, ensure that the valve and manifold have been vented. Remove the primary supply air hose to ensure total disconnection of the air supply before dismantling valves or blank connection blocks.



NB !

All technical data in this catalogue is typical only. The air quality is decisive for the valve life: see ISO 8573.



WARNING

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current product catalog. Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met. The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Parker Hannifin Corporation and its subsidiaries at any time without notice.

SALE CONDITIONS

The items described in this document are available for sale by Parker Hannifin Corporation, its subsidiaries or its authorized distributors. Any sale contract entered into by Parker will be governed by the provisions stated in Parker's standard terms and conditions of sale (copy available upon request).

	Page
Product General Overview	04
Purpose of the Moduflex IO-Link Module	04
Module assembly / disassembly	04
Technical Data	05
IO-Link module electrical specifications	05
Auxiliary Power supply determination	05
Solenoid Pilots addressing and Process mapping	06 to 07
IO-Link Module addressing used with Moduflex Valve System	06
IO-Link Module addressing used with H Micro Valve Series	06
IO-Link Module addressing used with H ISO Series – 15407-2	07
IO-Link Module addressing used with H ISO Series – 5599-2	07
IO-Link module connection	08
IO-Link and Auxiliary power connection	08
IO-Link module connected to SAFE power for valve control	08
Configuration IODD File	09
Diagnostic	09
Local diagnostic	09
Network diagnostic	09
Aux power management	10
Power supply diagnostic through LED	10
Power supply diagnostic through IO-Link and process mapping	10
Default values	10
Auxiliary power supply range adjustment	10
Switching cycle counter management	11
Over current or over temperature management	11
System Commands	12
Events	12

Product general overview

Purpose of the Moduflex IO-Link Module

The Moduflex IO-Link module has been designed to be connected to either an IO-Link Master Class A or Class B. It can be used with either the Moduflex Valve System, H Micro or H ISO 15407-2 and 5599-2 Valves Series. It can control up to 24 pilot solenoids valves depending on the valve series it is connected to, as shown on the illustration below:

IO-Link Class A




P2M2HBVL12400A13
P2M2HBVL12400A42
P2M2HBVL12400A43


Moduflex Valve
Up to 19 pilots




H Micro
Up to 24 pilots

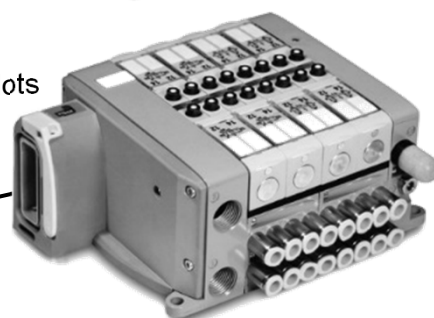

H ISO 15407-2
Sizes 02 & 01
Up to 24 pilots

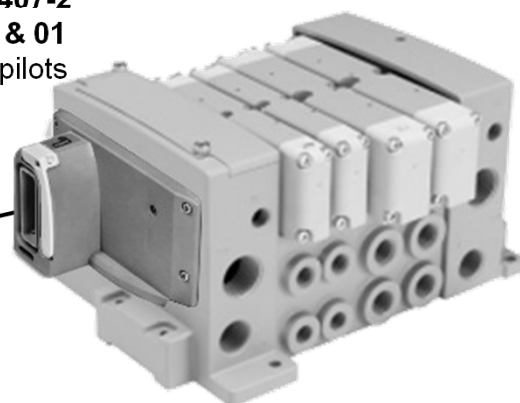

H ISO 5599-2
Sizes 1, 2 & 3
Up to 24 pilots

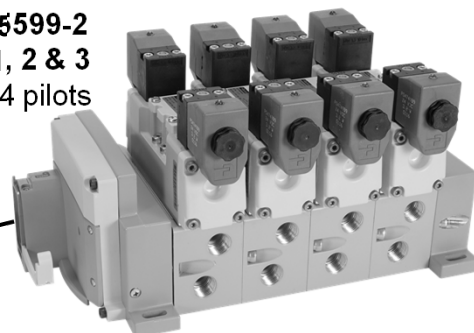


IO-Link Class B



P2M2HBVL12400B25

Module assembly / disassembly

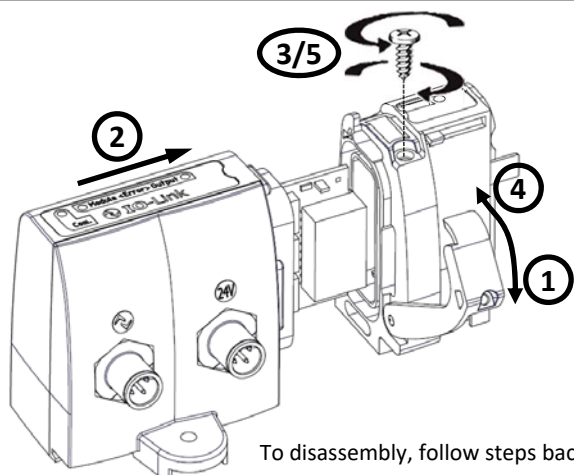

To disassembly, follow steps backward

For details on appropriate valve adaptor to use, please refer to the respective valve series technical catalogue and instruction sheets.

Technical Data

IO-Link module electrical specifications

Description	Value
IO-Link power supply	According to IO-Link standard
Speed communication	Com 2 – 38 kBd
Auxiliary power supply	20,4 Vdc to 26,4 Vdc
Current limit per channel	150 mA
Max. current limit	4 A
Polarity inversion protection	YES
Short circuit protection	YES
Operating temperature	0°C to +55°C
Storage temperature	-25°C to +70°C
Shock	According to IEC 60068-2-27:2008
Vibration	According to IEC 60068-2-6:2007
EMC	According to EN 55011 & EN 61000-4-2 up to -4-6

Auxiliary power consumption calculation


Depending on the valve range the module is connected to, pilot solenoids have not the same power consumption. In order to determine the minimum required power to supply, you can use the table below:

Valve Range	Number of Pilots simultaneously powered	Power	Total
Moduflex Valve System		x 40 mA	mA
H Micro		x 40 mA	mA
H ISO - 15407-2 - Sizes 02 & 01		x 40 mA	mA
H ISO - 5599-2 - Sizes 1, 2 & 3		x 133 mA	mA
Total :			mA

Solenoid Pilots addressing and Process mapping

IO-Link Module addressing used with Moduflex Valve System

The Moduflex IO-Link module used with Moduflex Valve System can handle up to 19 pilot solenoid valves. Addressing will be done as shown below:

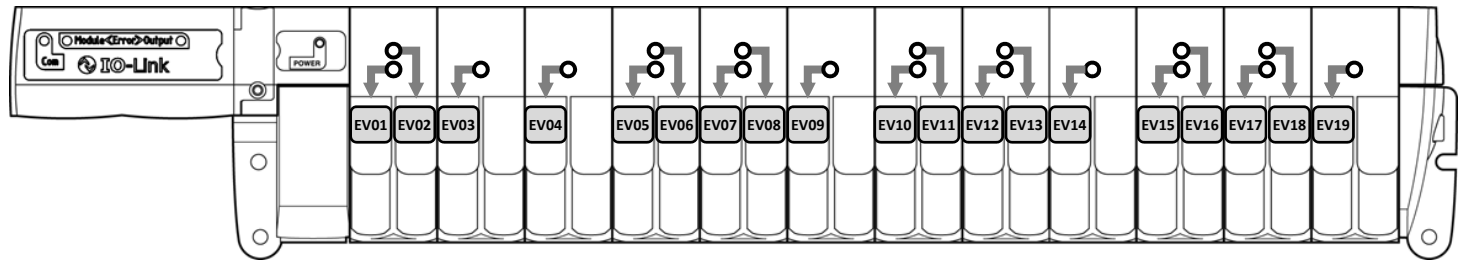


PLC Process outputs data mapping

	7	3	2	0
Byte 0	EV08 EV01					
Byte 1	EV16 EV09					
Byte 2*	EV24 EV20 EV19 ... EV17					

* Byte 2 / Bits 3 to 7 are not connected to valves with Moduflex Valve Range

IO-Link Module addressing used with H Micro Valve Series

The Moduflex IO-Link module used with H Micro Valve Series can handle up to 24 pilot solenoid valves. Addressing will be done as shown below:

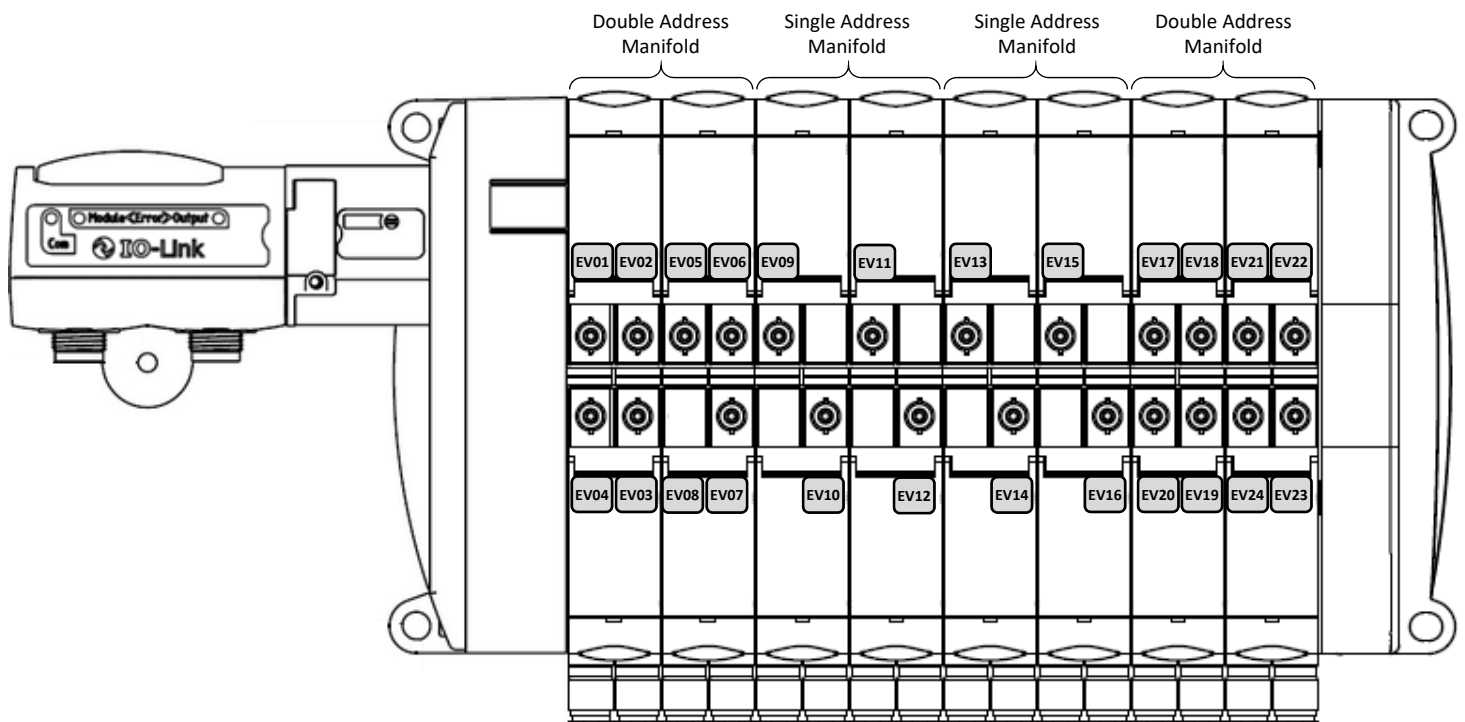


PLC Process outputs data mapping

	7	0
Byte 0	EV08 EV01		
Byte 1	EV16 EV09		
Byte 2	EV24 EV17		

IO-Link Module addressing used with H ISO Series – 15407-2


The Moduflex IO-Link module used with H ISO Series – 15407-2 – sizes 02 & 01 – can handle up to 24 pilot solenoid valves. Addressing will be done as shown below:

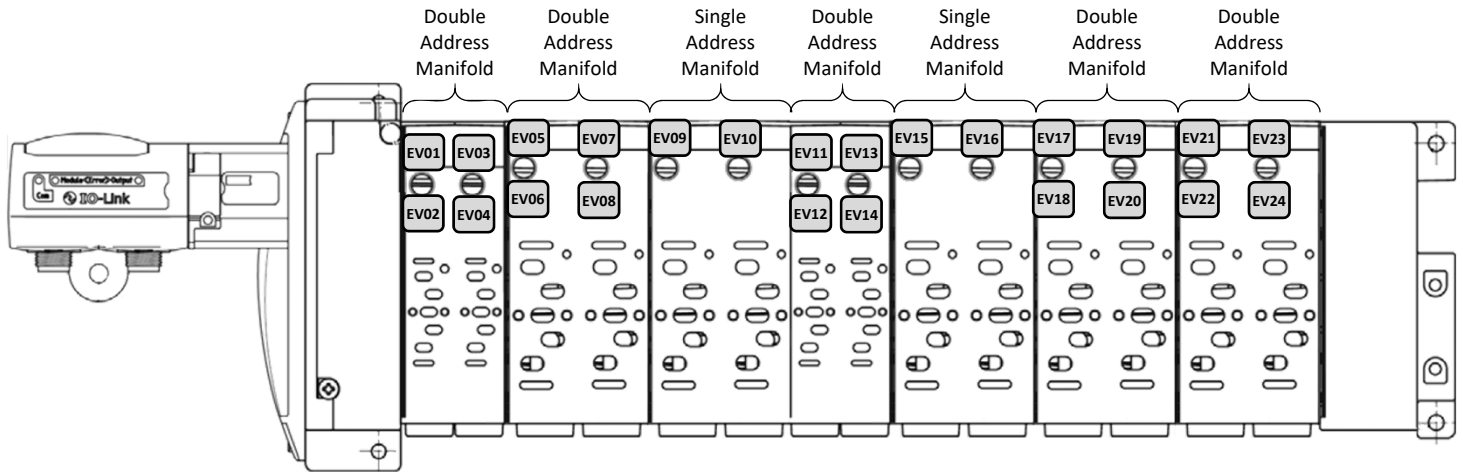

PLC Process outputs data mapping		7	0
Byte 0	EV08	EV01	
Byte 1	EV16	EV09	
Byte 2	EV24	EV17	

IO-Link Module addressing used with H ISO Series – 5599-2

The Moduflex IO-Link module used with H ISO Series – 5599-2 – sizes 1, 2 & 3 – can handle up to 24 pilot solenoid valves. Addressing will be done as shown below:

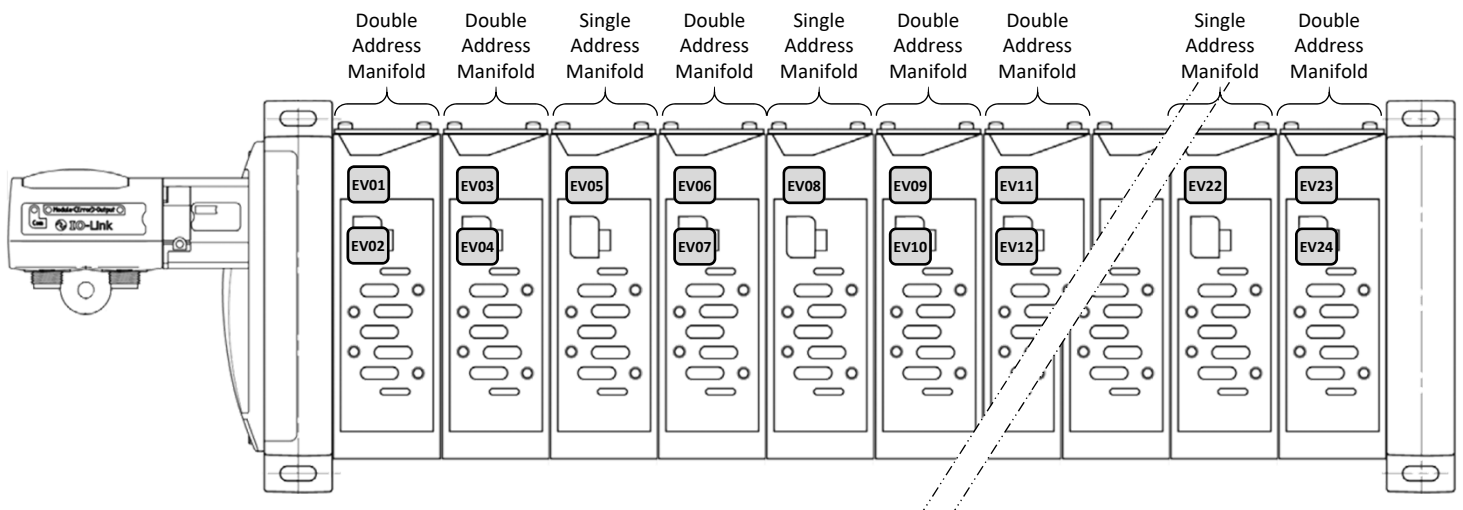

PLC Process outputs data mapping		7	0
Byte 0	EV08	EV01	
Byte 1	EV16	EV09	
Byte 2	EV24	EV17	

IO-Link module connection

IO-Link and Auxiliary power connection


Standard male M12 type A

Use of standard manufactured cables available from usual electrical supplier is recommended.


Notes:

- Auxiliary power for solenoids can be wired allowing to turn outputs OFF while communications remaining active.
- 3 Class A variants (...A13, ...A42 & ...A43) are available to follow different M12 supplier connections using standard cable.

Class B

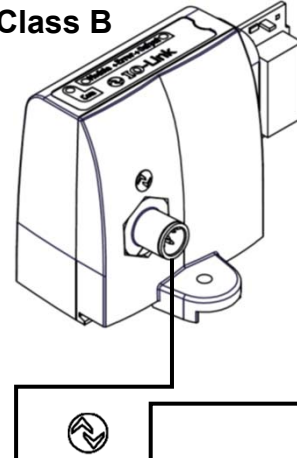

Class A

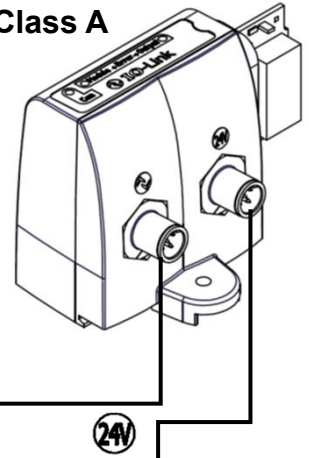

Legend

Symbol	Description
L+	IO-Link Power Supply "+"
L-	IO-Link Power Supply "-"
C/Q	IO-Link communication
Aux +	Auxiliary Power Supply 24 Vdc
Aux -	Auxiliary Power Supply 0 Vdc

Class B	Class A	M12 Pin's	Class A		
5 Pin's	3 Pin's		3 Pin's		5 Pin's
P2M...B..	P2M...A..		P2M...A13	P2M...A43	P2M...A42
L+	L+	1	Aux +	not used	not used
Aux +	-	2	-	-	Aux -
L-	L-	3	Aux -	Aux -	not used
C/Q	C/Q	4	not used	Aux +	Aux +
Aux -	-	5	-	-	not used





IO-Link module connected to SAFE power for valve control

The Moduflex IO-Link Module can be powered from a SAFE 24Vdc auxiliary source in PP or PM mode as grounds are isolated.



Class A

P2M2HBVL12400A13

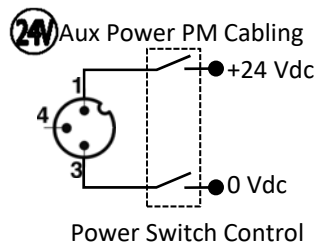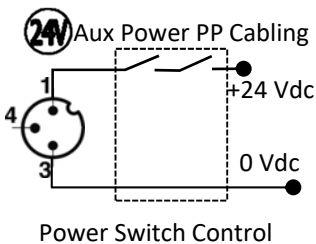



Class B

P2M2HBVL12400B25

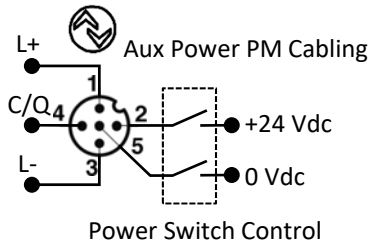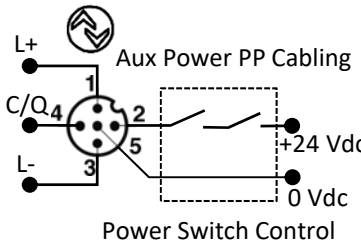



Class A

P2M2HBVL12400A43

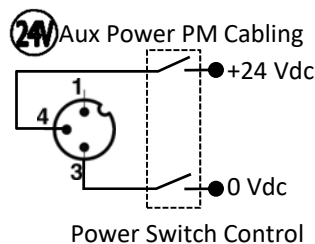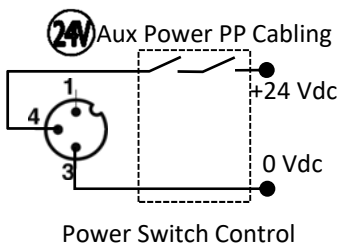

Class A

P2M2HBVL12400A42

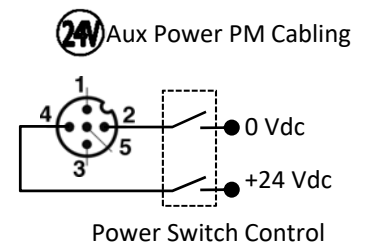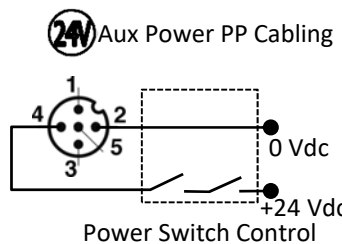

Note: Usage of this module with OSSD test pulsed as power source could not be possible unless the pulse can be adjusted to longer than 8ms. For additional guidance for this case of use, please contact your PARKER customer service.

Note : Please check max. power available from the source. Refer to the "Auxiliary power consumption calculation" section

Configuration IODD File















IODD file can be downloaded from IODD Finder or the Moduflex IO-Link web site:

- <https://ioddfinder.io-link.com>
- www.parker.com/pde/io-link

Diagnostic

Local diagnostic through LED:

The Moduflex IO-Link module offers a local diagnostic through 4 LED's status with interpretation described in the table below:

Green LED 			Red LED 			Red LED 			Green LED 		
LED Status	Description	Solving	LED Status	Description	Solving	LED Status	Description	Solving	LED Status	Description	Solving
OFF 	IO-Link L+ / L- line not powered	Check IO-Link power supply from IO-Link Master (pin's 1 & 3)	OFF 	Standard mode (No error active)	N/A	OFF 	Standard mode (No error active)	N/A	OFF 	Auxiliary power failure < 18V or > 28,5V	Check Auxiliary Power Supply
ON 	IO-Link L+ / L- line powered IO-Link master port set as SIO mode	Set IO-Link master channel in IO-Link mode	ON 	24 Vdc Auxiliary power missing or any active malfunction	Check Auxiliary power supply. If auxiliary power supply OK, module must be replaced	ON 	Any outputs driver error (Auxiliary power error, overload, short circuit, over temperature, ...)	If auxiliary power OK (see Power LED status), check error messages and related troubleshooting	ON 	Standard mode (Auxiliary power within normal range 20,4V* to 26.4V*)	N/A
Blinking 	IO-Link communication active	N/A							Blinking 	Auxiliary Power out of range (Warning level*)	Check Auxiliary Power Supply Check/reset adjusted values

*): Warning level values could have been modified by the user! Default values can be restored at any time (please refer to "Aux power management" section)

Diagnostic through network via process inputs data:

The Moduflex IO-Link module offers diagnostic data transmitted to the PLC as inputs process data through the IO-Link master:

PLC Process input data mapping		7 0
Byte 0	Diag 7 Diag 0	

Diag bit	Error message	Detail
Diag 0	Fail-Safe Status	Acknowledgment Required
Diag 1	Auxiliary Voltage Warning	Auxiliary Voltage Out of range. Check Auxiliary Power line
Diag 2	Auxiliary Voltage failure	Auxiliary Voltage Out of order. Check Auxiliary Power source
Diag 3	Module Failure	Switch OFF / ON auxiliary power. If error message persists, replace the module
Diag 4	Module Over-Temperature	Switch OFF / ON auxiliary power. If error message persists, replace the module
Diag 5	Module Over-Load	Check overall Pilot Solenoid valves. If error message persists, replace the module
Diag 6	Pilot Solenoid(s) Short Circuit	Check faulty pilot solenoid valve(s), replace if necessary
Diag 7	Outputs Stage Failure	Switch OFF / ON auxiliary power. If error message persists, replace the module

Errors caused by solenoid(s) must be fixed first and then the error must be acknowledged:


- by switching OFF/ON Auxiliary power supply (once error is fixed)
- by sending the "Acknowledge" command:

Command	Name	Description
0xA0	Acknowledge	If no error is pending, the failsafe state on the device is left and the outputs are switched according to process data

Aux power management


Power supply diagnostic through LED

The Moduflex IO-Link module monitors the auxiliary power supply voltage and manages two levels of diagnostic; failure or out of normal range. The normal range can be modified through parameter data.

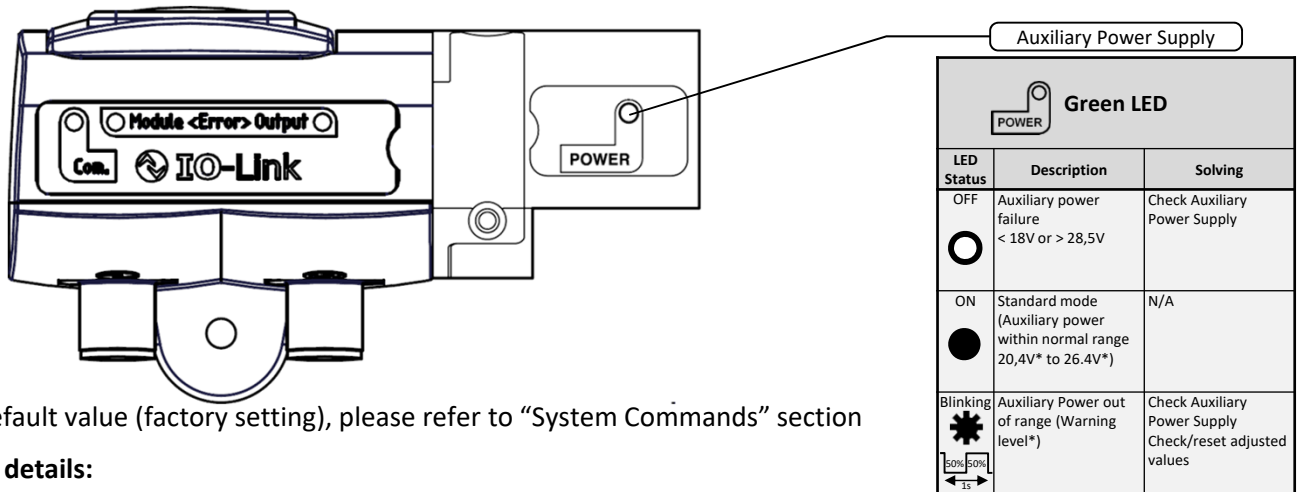


To restore default value (factory setting), please refer to “System Commands” section

LED function details:

- "Auxiliary power" error is active from 0 to 18 Vdc or > 28,5 Vdc
- When "Auxiliary power error" is active,  **Module Error** LED is solid red

Power supply diagnostic thought IO-Link and process data mapping



- Diag 1 : Auxiliary Voltage out of range, Alarm. Range can be set via parameter data
- Diag 2 : Auxiliary Voltage failure. < 18 V or > 28,5 V. Acknowledge is required (Diag 0)

Default values

Normal auxiliary power supply range is set as $20,4V < \text{Aux power supply} < 26,4V$

Auxiliary power supply range adjustment

Aux power supply range is adjustable using output parameters and value is available as parameter input.

Index	Sub index	Data Type	Bit length	Access	Name	Description
67	0	Uint16	16	Read	Current Aux. voltage value	Aux voltage, unit is mV
70	0	Record	32	Read / Write	Aux. voltage warning levels	Levels for AUX voltage warning Unit is mV First 16 bits: Low level value (default 20400) Second 16 bits: High level value (default 26400)

Restore default values

Default values can be sestored by using the system command below:

Commande	Nom	Description
0x82	Restore factory setting	Reset parameters to default values

Switching cycle counters management

The Moduflex IO-Link module manages 24 counters, one for each output, to provide solenoid's switching cycle. Those counters are automatically stored onto an EEPROM every 30 minutes.

In case of IO-Link power supply turned to OFF, the current counters' value will be lost and the latest stored values onto the EEPROM will be restored as current values at next start-up. To prevent this, before an IO-Link power off between two automatic savings, the command below allows to force the storage of the current counters' value

Command	Name	Description
0xA1	Store switching cycles	When this command is executed, the current values of the 24 switching cycle counters are stored into EEPROM.

Counters values are available through input parameters

Index	Sub index	Data Type	Bit length	Access	Name	Description
64	1 to 24	Array of Uint32	24 x 32 = 768	Read	Switching Cycles	Switching cycle counter: <ul style="list-style-type: none"> Sub index 1 refers to cycle counter of the first output Sub index 24 refers to the cycle counter of the 24th output

Counters values can be individually reset to 0

Index	Sub index	Data Type	Bit length	Access	Name	Description
65	0	Uint24	24	Write	Clear Switching Cycles	Clear the switching cycle counters. For every bits set in this parameter, the according counters are set to zero. The least significant bit refers to the first output (EV01) Values stored onto the EEPROM are automatically reset too

Over current or over temperature management

The Moduflex IO-Link module monitors the current & temperature values of the 24 outputs. As soon as a short circuit or over temperature is detected, the module switches to failsafe mode and all outputs are switched off.

Channel(s) responsible for this output error can be read in the input parameter.

Index	Sub index	Data Type	Bit length	Access	Name	Description
66	0	Uint32	32	Read	Channel Error	If an error occurred, this parameter shows which channel(s) caused the error. The least significant bit refers to the first output (EV01)

Errors caused by solenoid(s) must be fixed first and then the error must be acknowledged:

- by switching OFF/ON Auxiliary power supply (once error is fixed)
- by sending the "Acknowledge" command:

Command	Name	Description
0xA0	Acknowledge	If no error is pending, the failsafe state on the device is left and the outputs are switched according to process data

System Commands

Command	Name	Description
0xA0	Acknowledge	If no error is pending, the failsafe state on the device is left and the outputs are switched according to process data
0xA1	Store switching cycles	When this command is executed, the current values of the switching cycle counters are stored into EEPROM.
0x82	Restore factory setting	Reset parameters to default values. Cycles counters are not reset.

Events

Event Code	Name	Type	Description	Required user/PLC inter-action
0x4000	Temperature fault	Error	Outputs were switched off due to over temperature warning. Check the parameter Channel Error to see which output driver triggered this error.	Check load. Acknowledge required
0x5000	Output error	Error	This event occurs when controlling the outputs is not possible.	Switch OFF / ON auxiliary power. If event persists, replace the module
0x8CA0	Output driver channel Error	Error	Output drivers are switched off due to over current or over temperature of at least one channel. All outputs are switched off..	Check parameter to see which channel triggered this error. Fix solenoid issue. Acknowledge required
0x8CA1	Current overload	Error	Polyfuse of at least one out-put driver tripped.	Check parameter to see which channel triggered this error. Fix solenoid issue. Acknowledge required
0x8CA3	Module error	Error	Internal communication failed	Switch OFF / ON auxiliary power. If event persists, replace the module
0x8CA4	Aux power supply voltage warning	Warning	AUX voltage is out of range	Check power supply.
0x8CA5	Aux power supply voltage error	Error	AUX voltage failed	Check power supply. Acknowledge required

Notes:

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

PARKER Hannifin Manufacturing France SAS

Pneumatic Division Europe


Parc d'Activités de la Forêt

BP 3124

534, rue Henri Becquerel

27031 EVREUX CEDEX - FRANCE



Moduflex  IO-Link Modules

User Manual

UK30048690201W05 –

Release May 2017

DYSTRYBUTOR PARKER PREMIUM

ARA®
PNEUMATIK

| arapneumatik.pl

PARKER STORE WROCŁAW
pneumatyka@arapneumatik.pl
TEL. 71 364 72 80

PARKER STORE KATOWICE
katowice@arapneumatik.pl
TEL. 32 779 76 40

